
Content

Section 1

Introduction 1-1

- 1.1 Overview of Basic System 1-1
 - 1.1.1 Hardware Features 1-1
 - 1.1.2 Software Features 1-2
- 1.2 About this Manual 1-2
 - 1.2.1 Terms Used in this Manual 1-2
- 1.3 Compatible Products 1-3
- 1.4 How to Contact Silent Knight 1-4

Section 2

Agency Listings, Approvals, and Requirements 2-1

- 2.1 Federal Communications Commission (FCC) 2-1
- 2.2 Underwriters Laboratories (UL) 2-2
 - 2.2.1 Requirements for All Installations 2-2
 - 2.2.2 Requirements for Central Station Fire Alarm Systems 2-2
 - 2.2.3 Requirements for Local Protected Fire Alarm Systems 2-2
 - 2.2.4 Requirements for Remote Station Protected Fire Alarm Systems - Digital Alarm Communicator Transmitter (DACT) 2-2

Section 3

Before You Begin Installing 3-1

- 3.1 What's in the Box? 3-1
- 3.2 Environmental Specifications 3-1
- 3.3 Electrical Specifications 3-2
- 3.4 Wiring Specifications 3-3
- 3.5 Board Assembly Diagram 3-4
- 3.6 Calculating Current Draw and Standby Battery 3-5
 - 3.6.1 Worksheet Requirements 3-5
 - 3.6.2 Current Draw Worksheet 3-6
 - 3.6.2.1 Maximum Battery Standby Load 3-8

Section 4

Control Panel Installation 4-1

- 4.1 Mounting the Control Panel Cabinet 4-1
 - 4.1.1 Removing the 5808 Assembly from the Housing 4-1
- 4.2 AC Connection 4-2
- 4.3 Battery Connection 4-3
 - 4.3.1 AB-33 Accessory Cabinet 4-4
 - 4.3.1.1 Installing the AB-33 Accessory Cabinet and Batteries 4-4

4.4	SBUS Wiring	4-6
4.4.1	Calculating Wiring distance for SBUS modules	4-6
4.4.2	Wiring Configurations	4-9
4.5	Remote Annunciator 5860 Installation	4-10
4.5.1	Mounting the 5860	4-11
4.5.1.1	Flush Mounting	4-12
4.5.1.2	Surface Mounting	4-14
4.5.2	Model 5860 Connection to the Panel	4-14
4.6	5824 Serial/Parallel Interface Installation	4-15
4.6.1	Selecting 5824 Options	4-16
4.7	5880 LED Driver Module	4-18
4.7.1	5880 Board Layout	4-18
4.7.2	FACP Connection	4-19
4.7.3	LED Wiring	4-20
4.7.4	Dry Contact Wiring	4-21
4.8	5865-3 / 5865-4 LED Annunciator Installation	4-22
4.8.1	FACP Connection	4-23
4.8.2	5865 Mounting	4-23
4.9	Configuring Modules	4-25
4.9.1	Assigning Module IDs	4-25
4.10	Telephone Connection	4-26
4.10.1	Ground Start Relay (Model 5211)	4-26
4.11	Notification Appliance/Auxiliary Power Circuits	4-27
4.11.1	Conventional Notification Appliance	4-27
4.11.1.1	Class B Notification Wiring	4-27
4.11.1.2	Class A Notification Wiring	4-28
4.11.2	Auxiliary Power Installation	4-29
4.11.2.1	Door Holder Power	4-29
4.11.2.2	Constant Power	4-30
4.11.2.3	Resettable Power	4-30
4.12	On-Board Relays (Conventional)	4-30
4.12.1	Trouble Relay	4-30
4.12.2	Programmable Relays	4-30
4.13	Remote Station Applications	4-31
4.13.1	Keltron Model 3158 Installation	4-31
4.13.2	City Box Connection Using the 5220 Module	4-32
4.13.3	NFPA 72 Polarity Reversal	4-33
4.13.3.1	Using the 5220 Module	4-33
4.13.4	Using the SD500-ARM Addressable Relay Module	4-35
4.13.5	Using a MR-201/T Control Relay From Air Products	4-36

Section 5

SLC Device Installation 5-1

5.1	Types of SLC Devices	5-1
5.2	Maximum Number of Devices	5-2
5.3	Wiring Requirements for SLC Devices	5-2
5.3.1	Wiring SLC devices in Style 4 (Class B)	5-2
5.3.2	Wiring SLC Devices in Style 6 (Class A)	5-4
5.4	Heat and Smoke Detector Installation	5-5
5.4.1	Wiring	5-5
5.5	Duct Detector Installation	5-6

5.6	Input Monitor Module (SD500-AIM)	5-7
5.7	Mini Input Module (SD500-MIM)	5-8
5.8	Relay Module Installation	5-9
5.8.1	Electrical Specifications	5-9
5.8.2	Wiring	5-9
5.9	SLC Device Addressing	5-10
5.9.1	EEPROM Addressing	5-10
5.9.2	Dipswitch Addressing	5-11

Section 6

Programming Overview 6-1

6.1	JumpStart Autoprogramming	6-1
6.1.1	Input Points	6-2
6.1.2	Output Points	6-2
6.1.3	Running JumpStart	6-2
6.2	Mapping Overview	6-4
6.2.1	Input Point Mapping	6-5
6.2.2	Output Circuit Mapping	6-6
6.2.3	Zone Event Mapping	6-7
6.2.4	Mapping LED Points	6-9
6.3	Silent Knight Software Suite (SKSS)	6-10
6.4	Annunciator Programming	6-10
6.4.1	Entering / Exiting the Program Menu	6-11
6.4.2	Moving through the Menus	6-12
6.4.3	Selecting Options and Entering Data	6-12
6.4.4	Editing Keys	6-13
6.5	Programming Menu Quick Reference	6-14

Section 7

Programming 7-1

7.1	Modules	7-1
7.1.1	Edit Modules	7-1
7.1.1.1	Naming Modules	7-2
7.1.1.2	Module, Wiring Class	7-2
7.1.2	Adding a Module	7-2
7.1.3	Deleting a Module	7-3
7.2	Zone	7-4
7.2.1	Edit Zone	7-4
7.2.1.1	Edit Zone Name	7-4
7.2.1.2	Edit Zone Properties	7-5
7.2.1.3	Zone Outputs	7-7
7.2.1.4	Cadence Patterns	7-10
7.2.2	Add Zone	7-11
7.2.3	Delete Zone	7-11
7.2.4	View Zone Points	7-12
7.3	Group	7-13
7.3.1	Edit Group	7-13
7.3.1.1	Edit Group Name	7-13
7.3.1.2	Edit Group Properties	7-14

7.3.2	Add Group	7-16
7.3.3	Delete Group	7-16
7.3.4	View Group Points	7-17
7.3.5	Edit Output Group Templates	7-18
7.4	Point	7-19
7.4.1	Point Programming For SLC	7-19
7.4.2	Point Programming For Internal or External Power Module (5496)	7-22
7.4.3	Point Programming For 5880 and 5865 Modules	7-23
7.4.3.1	Assigning a Name to a Points	7-24
7.5	System Options	7-26
7.5.1	Reporting Account	7-26
7.5.1.1	Edit Accounts	7-27
7.5.1.2	Auto Test Time	7-30
7.5.2	Phone Lines	7-30
7.5.2.1	Dialing Prefix	7-31
7.5.2.2	Number of Answer Rings	7-31
7.5.2.3	Dial Option (TouchTone or Pulse)	7-32
7.5.2.4	Rotary Format	7-32
7.5.2.5	Line Monitor	7-32
7.5.2.6	Ground Start Relay	7-32
7.5.2.7	Answering Machine Bypass	7-33
7.5.3	Sys. Event Outputs	7-33
7.5.3.1	Trouble Events	7-33
7.5.3.2	System Alarm Cadence	7-34
7.5.4	Miscellaneous Options	7-35
7.5.4.1	Water Flow Delay	7-35
7.5.4.2	Low AC Report Delay	7-36
7.5.4.3	Automatic Daylight Savings Adjustment	7-36
7.5.4.4	Clock Display Format (AM/PM or Military)	7-36
7.5.4.5	Change AC Line Frequency	7-36
7.5.5	Miscellaneous Options 2	7-37
7.5.5.1	Auto Display Oldest Event	7-37
7.5.5.2	Report by Zone or by Point	7-37
7.5.6	Edit Banner Message	7-38
7.6	JumpStart Autoprogramming	7-39
7.7	Computer Account	7-40
7.8	Access Codes	7-41
7.8.1	Profile Edit Menu	7-42
7.8.1.1	Edit Name	7-42
7.8.1.2	Edit Access Code	7-42
7.8.1.3	Panel Functions	7-43

Section 8

System Operation 8-1

8.1	Annunciator Description	8-1
8.1.1	LCD Displays	8-2
8.1.2	Banner	8-2
8.2	Key Operation	8-2
8.3	Menu System	8-3
8.3.1	Main Menu Overview	8-3

8.3.2	Using the Menus	8-4
8.4	Basic Operation	8-4
8.4.1	Setting Time and Date	8-4
8.4.2	Disable / Enable a Point	8-4
8.4.3	View Event History	8-4
8.4.3.1	To clear the event history	8-5
8.4.4	Conduct a Fire Drill	8-5
8.4.5	Conduct an Indicator Test	8-5
8.4.6	Conduct a Walk Test	8-6
8.4.7	Conduct a Dialer Test	8-6
8.4.8	Silence alarms or troubles	8-6
8.4.9	Reset alarms	8-7
8.4.10	Check Detector Through Point Status	8-7
8.4.11	View Status of a Point	8-8
8.4.12	View Alarms or Troubles	8-8
8.4.13	View System Information	8-8
8.4.14	Reset dialer	8-8
8.4.15	Communicating with a Remote Computer	8-9
8.4.16	Working with a Printer	8-10
8.5	Operation Mode Behavior	8-11
8.6	Releasing Operations	8-14
8.6.1	Single Interlock Zone Releasing	8-15
8.6.2	Double Interlock Zone Releasing	8-16

Section 9

Reporting 9-1

9.1	Receivers Compatible with the Control Panel	9-1
-----	---	-----

Section 10

Testing and Troubleshooting 10-1

10.1	Troubleshooting	10-1
10.2	Common Problems	10-1
10.2.1	Event History	10-2
10.3	Built-in Troubleshooting and Testing Tools	10-3
10.3.1	SLC Device Locator	10-3
10.3.2	SLC Multi Locator	10-4
10.3.3	I/O Point Control	10-5

Section 11

Installation Records 11-1

11.1	SLC Point Record	11-1
------	------------------------	------

Appendix A
Compatible Devices1

- A.1 Notification Appliances1
- A.2 Door Holder Device8

Appendix B
Special Characters ListsB-1

- B.1 Characters used for NamingB-1