


# CO<sub>2</sub> Component Description

Effective: April 1999

K-81-9090

## Carbon Dioxide Cylinder Weighing Scale

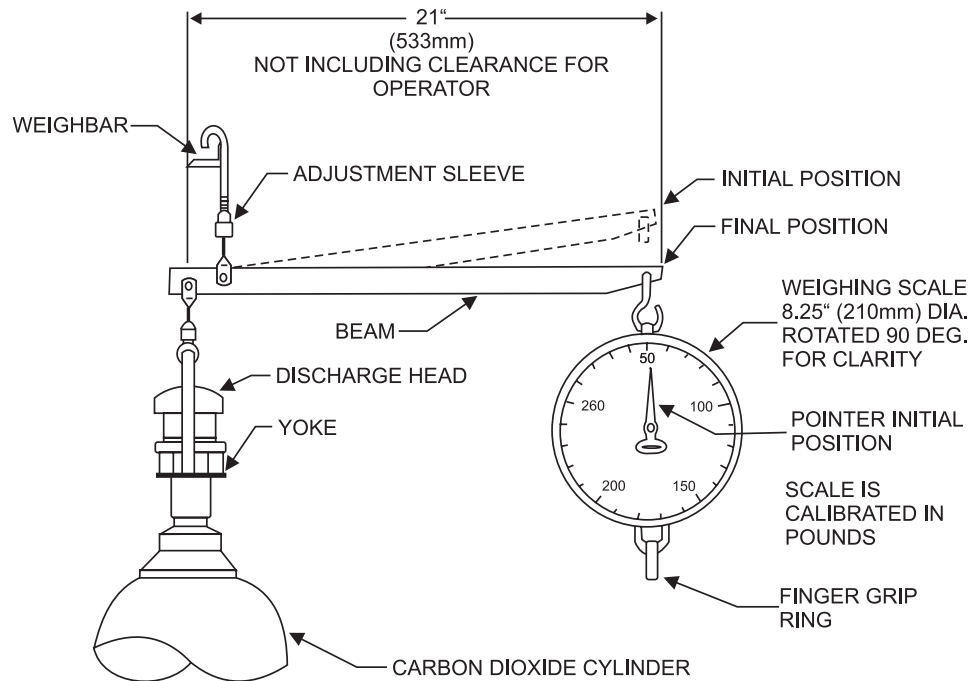

**TO WEIGH CYLINDERS:** REMOVE CONTROL HEAD, IF USED. LOOSEN CYLINDER FROM FRAMING. HANG HOOK ON WEIGHBAR. PLACE YOKE UNDER DISCHARGE HEAD. USE ADJUSTMENT SLEEVE TO BRING BEAM TO INITIAL POSITION. PULL DOWN ON FINGER GRIP RING UNTIL BEAM IS IN FINAL POSITION. READ WEIGHT ON WEIGHING SCALE. DEDUCT 3.75 LBS. FOR DISCHARGE HEAD ALLOWANCE. RESULT IS WEIGHT OF CYLINDER.

P/N: 982505

This literature is provided for informational purposes only. KIDDE-FENWAL, INC. assumes no responsibility for the product's suitability for a particular application. The product must be properly applied to perform as described herein.

If you need more information on this product, or if you have a question, contact KIDDE-FENWAL, INC., Ashland, MA 01721. (508) 881-2000.

K-81-9090 4/99 ©1999 Kidde-Fenwal, Inc. Printed in U.S.A.

**KIDDE**<sup>®</sup>  
**Fire Systems**

KIDDE-FENWAL, INC.  
400 MAIN STREET, ASHLAND, MA 01721  
TEL: (508) 881-2000 FAX: (508) 881-8920

**KIDDE**<sup>®</sup> Fire Systems